


**ROBOTIC POOL CLEANER**

# **UBoter**

**S10**

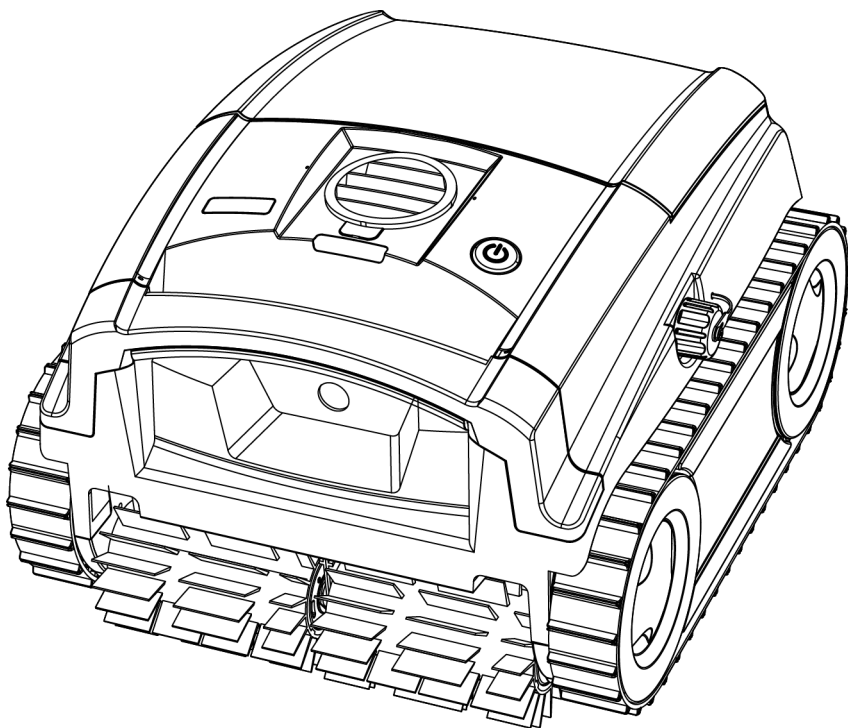

**USER MANUAL**



# FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This device complies with FCC and IC RF radiation exposure limits set forth for general population. This device must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

# Customer Service

Thank you for choosing UBoter Robotic Pool Cleaner S10!

Robotic pool cleaner S10 is new and efficient robotic pool cleaning equipment. This cleaner is suitable for all kinds of pools and can automatically clean the swimming pool floor, walls and waterline without discharging the pool water. Meanwhile, through its filtration system, it can collect suspended solids and sediments in water.

This cleaner is powered by 4,600mAh | 21.6V | 99.36Wh lithium-ion battery pack, which ensures high safety.

For more support, contact us via [service@yofinerobot.com](mailto:service@yofinerobot.com)

## **WARNING**

**FOR YOUR SAFETY** - For anything other than cleaning and maintenance described in this user manual, this product must be serviced or repaired by a qualified professional with sufficient experience in the maintenance and repair of robotic pool cleaners so that all safety instructions in this user manual must be fully followed in order to prevent injury. Improper operation may void the warranty.

## **CAUTION**

Use this cleaner in the following water conditions:

- Chlorine: 4 ppm max.
- PH: 7.0 - 7.8
- Water Temperature: 41°F - 95°F (5°C - 35°C)
- NaCl: 5,000 ppm max.

# Table of Contents

FCC Statement	1
Customer Service	2
CAUTION	2
Table of Contents	3
Section 1. Important Safety Instructions	4
Section 2. Specifications	8
Section 3. Product Overview	9
3.1 Packing List	9
3.2 Product Diagram	10
3.3 Indicator	11
3.4 Mode Selection	12
Section 4. General Cleaner Operation	13
4.1 Charge	13
4.2 App Connection	15
4.3 Start the Cleaner	19
4.4 Retrieve the Cleaner	20
4.5 Maintenance	21
Section 5. Storage	23
Section 6. Troubleshooting	24
Section 7. Limited Warranty	28

# Section 1. Important Safety Instructions

When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

## READ AND FOLLOW ALL INSTRUCTIONS

- **WARNING** - To reduce the risk of injury, do not permit children to use this cleaner unless they are closely supervised at all times.
- Ensure that children do not attempt to access the cleaner while it is operating.



## WARNING

- Failure to comply with the following warnings can result in permanent injury, electrocution or death.
- Improper operation may void the warranty.

### Operation Restrictions

- Please read the user manual carefully, especially the safety instructions, and make sure you fully understand them before using the cleaner. Carefully follow the instructions on operation, maintenance and repair. The manufacturer shall not be held liable for any loss or injury resulting from improper use.
- This cleaner is not suitable for use by children under 8 years of age and people with physical, sensory or mental functional limitations or inexperienced people who are not familiar with the cleaner. Children should be supervised to ensure that they do not ride on or play with the cleaner as a toy, even when it is not in operation.
- Only use original accessories supplied by the manufacturer with this cleaner. The manufacturer shall not be held liable if non-original accessories are used. Failure to comply with this requirement may seriously endanger the health and safety of people.
- After powering on the cleaner and selecting the mode, put the cleaner into the pool within 30 seconds; otherwise the indicator will show a steady red light.

- Never use the cleaner while the pool filtration system is in operation, as this may cause damage to both the cleaner and the filtration system.
- Never enter the pool while the cleaner is in water.
- Always power off the cleaner immediately when it is removed from the water to prevent motor damage caused by dry operation.
- Non-professional personnel are forbidden to disassemble the cleaner's sealing box, as this may endanger the health and safety of people and cause damage to the cleaner.
- Never pierce the cleaner's shell with nails or other sharp objects, and never hammer, hit or throw the cleaner.
- The motor oil seal contains grease. If the grease leaks, it may cause slight water pollution. Stop using the cleaner immediately if any leakage is detected, and contact customer service promptly.
- After dispensing pool chemicals, wait at least 24 hours before using the cleaner. This prevents corrosion or damage to the cleaner. Never use the cleaner to dispense chemicals, as this may cause internal corrosion or functional failure.
- When the cleaner is not in use, store the cleaner in a cool, dry, and well-ventilated indoor area, away from direct sunlight, rain, frost with a temperature between 41°F (5 °C) and 95°F (35 °C), out of reach of children, pets, other foreign objects, etc.
- Never store the cleaner near flammable materials (e.g., paper, cloth, chemicals), excessive temperatures or heat sources (e.g., heaters, ovens).
- Never expose the cleaner to fire.

### Maintenance

- Always power off the cleaner and disconnect the battery charger before performing maintenance.
- Always clean the filter basket immediately and thoroughly after each use to maintain optimal cleaning performance and extend the cleaner's lifespan.

### Battery & Charging

- Use only the original battery charger supplied by the manufacturer with this cleaner. Improper use may cause electric shocks, overheating or leakage of corrosive liquids from the battery.
- Before charging, confirm the cleaner is powered off and the charging port is dry.

- During charging, both the battery charger and the cleaner must be placed indoors or in a splash-resistant enclosure at least 5 feet (1.5 meters) from the edge of the pool, with a temperature between 41°F (5 °C) and 95°F (35 °C), out of reach of children, pets, other foreign objects, etc.
- Never cover the battery charger and the cleaner with any objects during charging, as this may cause overheating.
- Only connect the battery charger to a receptacle protected by a ground fault circuit interrupter (GFCI).
- Never charge the cleaner near flammable materials (e.g., paper, cloth, chemicals), excessive temperatures or heat sources (e.g., heaters, ovens).
- Never expose the cleaner to fire.
- Charge the cleaner before its battery completely runs out. Additionally, when the cleaner's yellow indicator light is on, charge it promptly.
- Never charge the cleaner when its battery is full. Overcharging will shorten the battery's lifespan.
- If the battery charger is damaged, have it replaced by the manufacturer or an authorized dealer. Do not attempt to service the battery charger. A damaged cord can lead to contact with live parts.
- Never attempt to disassemble the battery pack. The battery can produce a short circuit causing severe burns. Avoid contact between any wires or metal items that could cause sparking and short circuit the battery.

### Long-Term & Winter Storage

- Drain all water to avoid freezing water damage (freeze damage is not covered under warranty).
- Rinse the filter basket with clean water, air-dry it completely, then reinstall it inside the cleaner.
- Charge the cleaner to 40%-60% capacity once every 3 months (do not fully charge or discharge the battery for long-term storage).

### Disposal of Li-ion Batteries

- This cleaner contains a maintenance-free, rechargeable lithium-ion battery pack, which must be disposed of properly. Recycling is required.
- Regulations and laws pertaining to the recycling and disposal of Li-ion batteries vary from country to country as well as by state and local governments. You should check the laws and regulations where you live.
- There are a number of facilities that recycle Li-ion batteries. The Rechargeable Battery Recycling Corporation's web site, [www.rbrc.org](http://www.rbrc.org), is an excellent source for finding a facility to handle these types of batteries.

- If you are not sure whether your waste facility can handle Li-ion batteries, contact them to verify that they are authorized to do so.
- Remember that before any type of disposal, the batteries should be discharged completely.

## **SAVE THESE INSTRUCTIONS**


# Section 2. Specifications

The general specifications for the cleaner are as follows:


Model Code	S10
Suitable Pool Type	All Pools
Ideal Pool Size	≤ 1,290 sq.ft (120m <sup>2</sup> )
Charger Input	100-240Vac, 50-60Hz
Charger Output	25.2V   1.75A
Rated Working Voltage	21.6V
Power	60W
Battery Capacity	4,600mAh   21.6V   99.36Wh
Charging Time	3-3.5 Hours
Runtime	2-2.5 Hours
Flow Rate	2,900GPH (11m <sup>3</sup> /h)
Filter Density	180µm
Moving Speed	33ft/min (10m/min)
Waterproof Rating	IPX8
Cleaner Weight	17.20lbs (7.8kgs)
Cleaner Dimension	15.6*14.2*9.7 in (395*361*245 mm)
Charging Temperature Range	41°F - 95°F (5°C - 35°C)
Water Temperature Range	41°F - 95°F (5°C - 35°C)
Operating Water Depth	1.3-10ft (0.4-3m)

# Section 3. Product Overview


## 3.1 Packing List

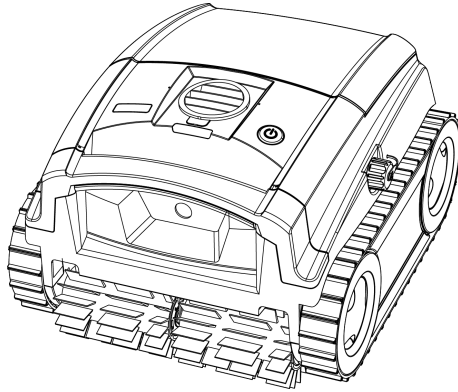


Robotic Pool Cleaner S10

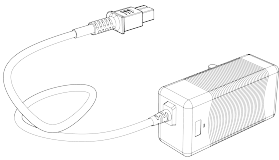

Battery Charger

 

Hook


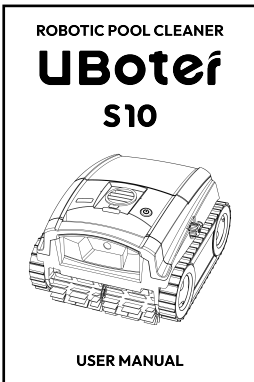


User Manual








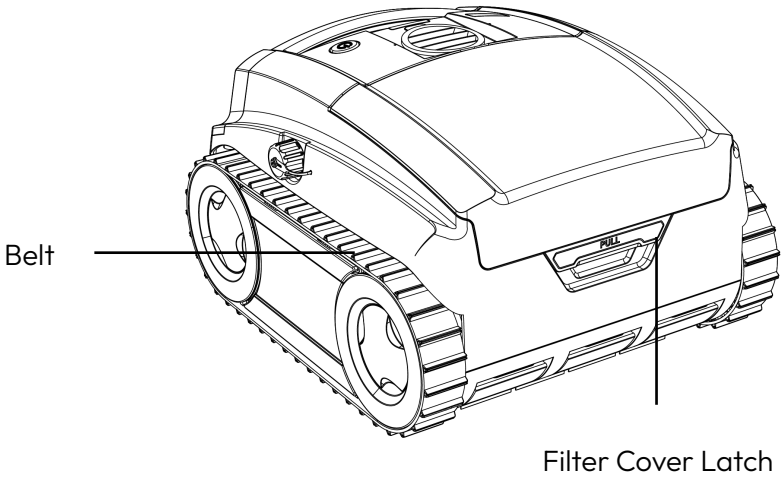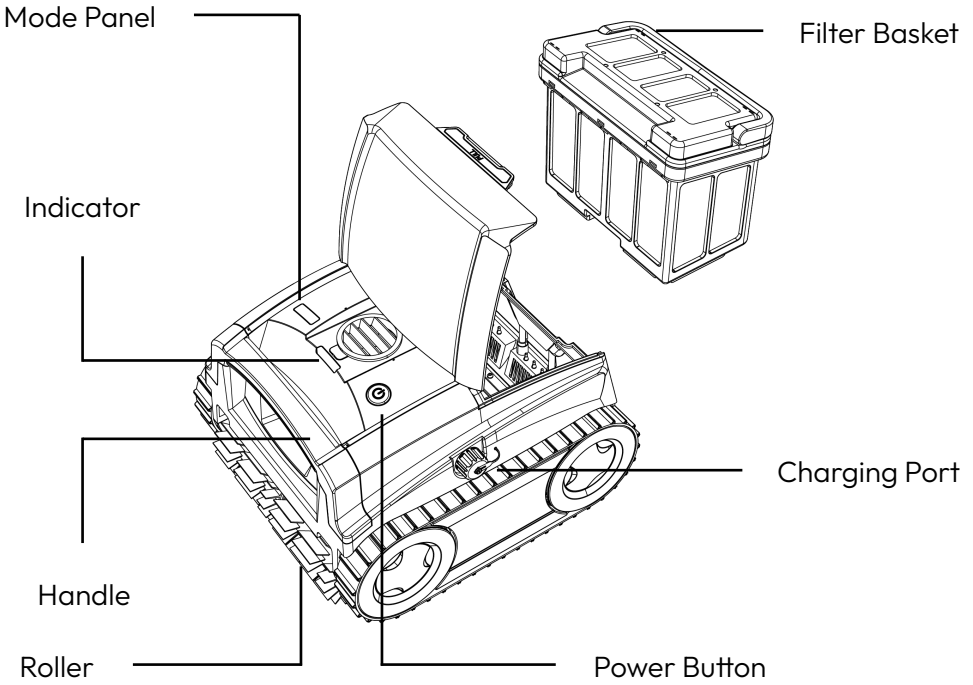

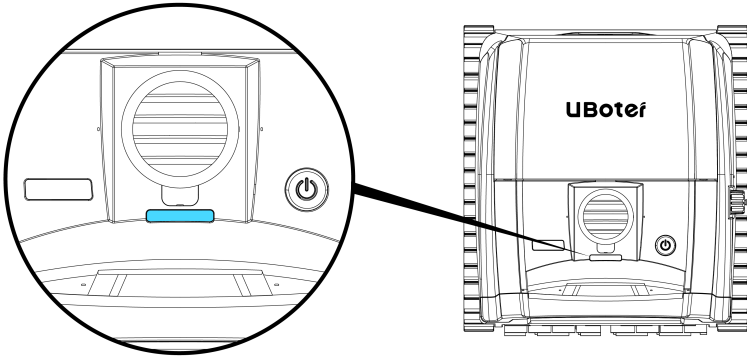


Quick Start Guide

### 3.2 Product Diagram



### 3.3 Indicator



Indicator Light	Indicator Status	Cleaner Status	Buzzer Status
	Flashing	Charging Nor- mally	Sounds for 2 Seconds
	Steady	Fully Charged	No Sound
	Flashing	Working in the water	No Sound
	Steady	Power on	Sounds for 2 Seconds
	Flashing	Auto Parking (Low Battery)	No Sound
	Steady	Auto Parking Completed	No Sound
	Flashing	Impeller Blockage	No Sound
	Steady	Land Alarm	Sounds for 3 Seconds
	Steady	Program writing in progress	No Sound

## 3.4 Mode Selection

### 3.4.1 Full Pool Mode

- After powering on, the cleaner will automatically enter “Full Pool Mode”. The cleaner will first clean the pool walls, then the pool bottom, then the pool walls again, then the pool bottom again, until it runs out of power.
- To switch to another cleaning mode, press the power button after the mode panel light turns on.



### 3.4.2 Floor Only Mode

Press once after “Full Pool Mode” light turns on to switch to “Floor Only Mode”. The cleaner will clean the pool bottom only.



### 3.4.3 Wall Only Mode

Press once after “Floor Only Mode” light turns on to switch to “Wall Only Mode”. The cleaner will clean the pool walls only.



### 3.4.4 Waterline Mode

Press once after “Wall Only Mode” light turns on to switch to “Waterline Mode”. The cleaner will clean the waterline only.



**NOTE:** After selecting the mode, put the cleaner into the pool within 30 seconds.


# Section 4. General Cleaner Operation

## 4.1 Charge


Before each use, please fully charge the cleaner.

### 4.1.1 Charging Operation

- Before charging, ensure the cleaner is powered-off (all indicator lights are completely off).
- Unscrew the waterproof cap (confirm the charging port is dry first) and connect the battery charger to a receptacle protected by a ground fault circuit interrupter (GFCI).

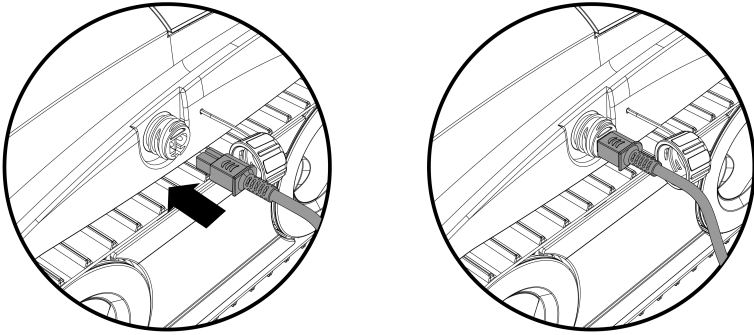


- Both the battery charger and the cleaner must be placed indoors or in a splash-resistant enclosure at least 5 feet (1.5 meters) away from the edge of the pool during charging.

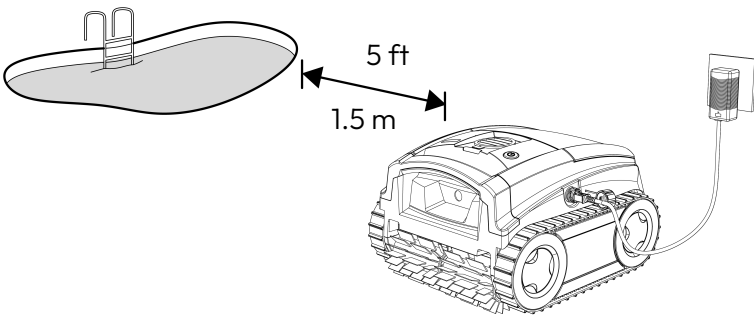

#### 4.1.2 Charging Indicator

- A flashing green light: the cleaner is charging.
- A steady green light: the cleaner is fully charged.

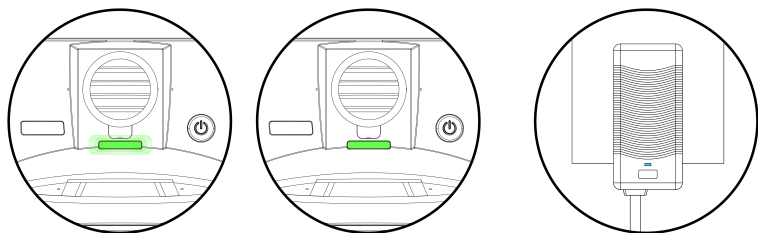

**NOTE:** The charger's indicator will show a steady blue as long as it is powered on.

### **WARNING**

**Failure to comply with the following warnings can result in permanent injury, electrocution or death.**

- Use only the original battery charger supplied by the manufacturer with this cleaner. Improper use may cause electric shocks, overheating or leakage of corrosive liquids from the battery.
- During charging, both the battery charger and the cleaner must be placed indoors or in a splash-resistant enclosure at least 5 feet (1.5 meters) from the edge of the pool, with a temperature between 41°F (5°C) and 95°F (35°C), out of reach of children, pets, other foreign objects, etc.
- Never cover the battery charger and the cleaner with any objects during charging, as this may cause overheating.
- Only connect the battery charger to a receptacle protected by a ground fault circuit interrupter (GFCI).
- Never charge the cleaner near flammable materials (e.g., paper, cloth, chemicals), excessive temperatures or heat sources (e.g., heaters, ovens).
- Never expose the cleaner to fire.

## 4.2 App Connection

### 4.2.1 Download the App

**NOTE:** Ensure your mobile phone is running iOS 14 or later, or Android 8.0 or later.

Method 1:


Scan the QR code below. After scanning, you can choose the corresponding store (Apple's App Store or Google Play) to download the App.



Method 2:

Download the App from an App store

- For Android phones, search “UBoter” in Google Play and download.
- For iPhones, search “UBoter” in Apple’s App Store and download.

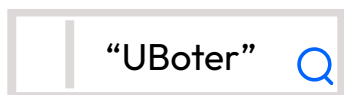

### 4.2.2 Preparations Before Connecting to the App

Open the “UBoter” App and follow the on-screen instructions in the App to complete the preparations before adding a device, including:

- 1) Allow Bluetooth access (ensure your Bluetooth version is 5.0 or above);
- 2) Allow Wi-Fi access (ensure the current Wi-Fi network is a 2.4 GHz single-band network. 5 GHz single-band and 2.4 GHz / 5 GHz dual-band merged networks are not supported);

3) Read and agree the Privacy Policy;

4) Create an account and log in.

#### 4.2.3 Add a Device

1) Bring your cleaner close to your mobile phone (within 3.3 feet / 1 meter);

2) Remove the cleaner from the water and power on the cleaner with the indicator showing a steady blue light, or charge the cleaner with the indicator showing a steady green light or a flashing green light;

3) Open the “UBoter” App and tap the “ + ” icon on the home page to add a device.

**NOTE:** The App will automatically search for nearby devices. When the cleaner is found, follow the on-screen instructions to connect via Bluetooth and complete network pairing. After pairing is completed, assign a name to the cleaner to finish adding the device.

### CAUTION

The App cannot be connected while the cleaner is operating in the water.

#### 4.2.4 Setting the Cleaner in the App

After connecting to the App, select the desired cleaning mode and cleaning time in the App.

**NOTE:** After the settings are completed, put the cleaner into the pool within 30 seconds. The cleaner will automatically start cleaning according to the selected settings.

### CAUTION

The cleaner cannot receive signals when it is underwater. Once working, you cannot pause cleaning.



#### Doge

UBoater S10



Select a Pool



Mode



Clean Time



Delay



water pump mode

Balance



Let it go



## 4.2.5 Firmware Upgrade (OTA)


### 1) Preparation for upgrade

The cleaner firmware can be upgraded when the cleaner is in either of the following states:

- The cleaner is powered on with the indicator showing a steady blue light
- The cleaner is charging with the indicator showing a steady green light or a flashing green light.

### 2) Firmware upgrade procedure

Open the UBoter App, enter the home page, tap “Firmware Update” and follow the on-screen instructions to complete the firmware update.

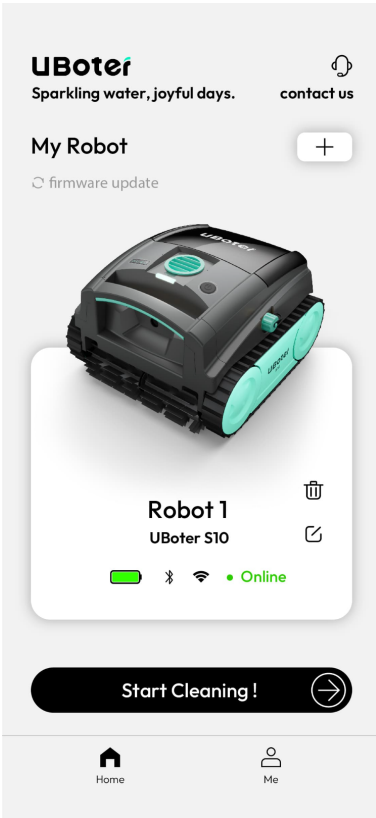

### NOTICE:


- The OTA upgrade does not affect normal charging.
- If the charger is not connected, make sure the cleaner has sufficient battery power before upgrading.

# IMPORTANT

- During an OTA firmware upgrade, the cleaner should be connected to the charger or powered on without charging.
- If the cleaner is connected to the charger, do not disconnect the charger during the upgrade.
- If the upgrade is performed while the cleaner is powered on and not connected to the charger, the red indicator light may remain on due to the out-of-water alarm. This is normal and does not affect the upgrade.
- After the upgrade is completed successfully, the cleaner will automatically power off.


### 3) Initialization After Upgrade

After the upgrade is complete, press and hold the power button to restart the cleaner. Upon restarting, the purple indicator light will turn on, indicating that the cleaner is initializing system data. Once initialization is finished, the cleaner will automatically power off. The cleaner is now ready for normal operation.

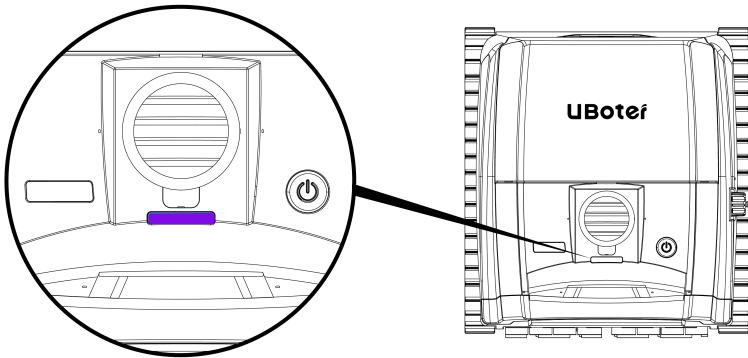

### 4.3 Start the Cleaner

- Press and hold the power button for 3 seconds to power it on. Release the button until the indicator light turns steady blue and the buzzer sounds for 2 seconds.
- Put the cleaner into the pool within 30 seconds after powering it on, with its bottom facing towards the wall; hold the handle and press the cleaner into the water.

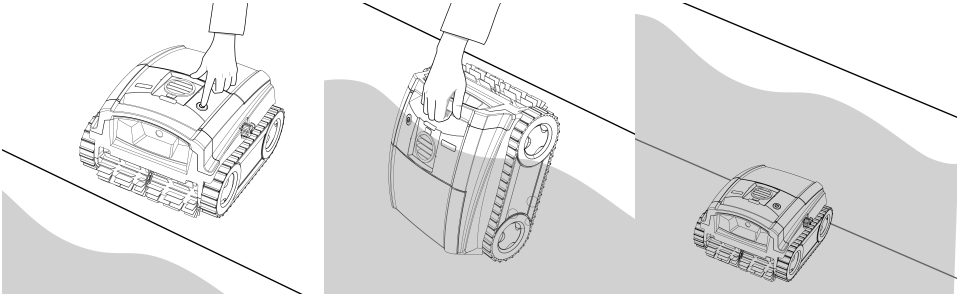

#### **CAUTION**

Ensure the waterproof cap for the charging port is fastened securely; otherwise, water may get into the charging port, which could affect the cleaner's charging function.

#### **CAUTION**

When placing the cleaner in water, ensure its front faces upward and its bottom faces the pool floor. If the cleaner flips over during operation, correct its orientation promptly. Once ready, the cleaner will automatically clean the pool.

#### **WARNING**

Do not enter the pool while the cleaner is in water.


## 4.4 Retrieve the Cleaner

### 4.4.1 Auto-Park



When the battery is low, the cleaner will automatically return to the pool wall for easy retrieval.

### 4.4.2 Retrieval

- Attach the hook to a standard pole (not included).

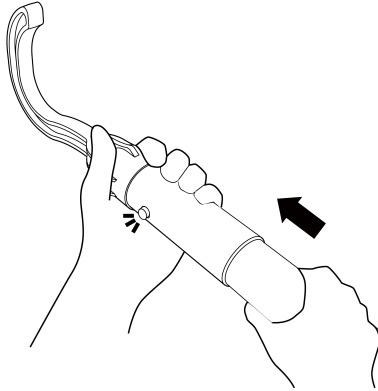

- Hook the cleaner's handle and bring it to the waterline.
- Press and hold the power button for 3 seconds to power off the cleaner.
- Pull up the cleaner by the handle and hold it vertically to let the water drain into the pool.

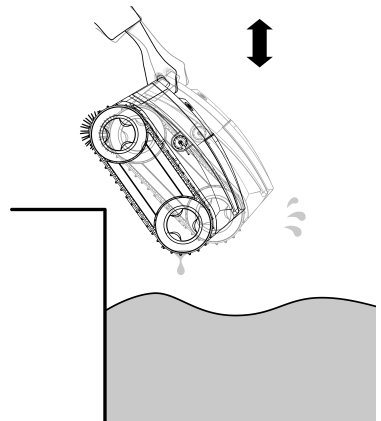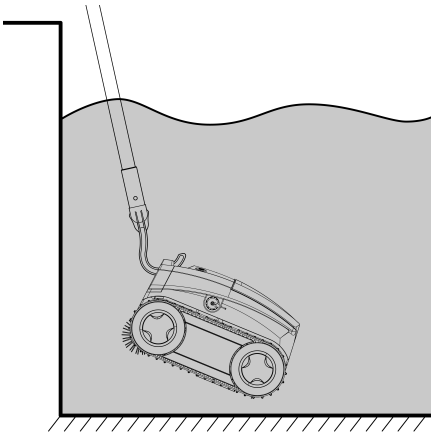


## 4.5 Maintenance


The filter basket should be cleaned immediately after each use.

### 4.5.1 Flip open the cover

Pull the latch on the back side of the cleaner and flip open the top cover.

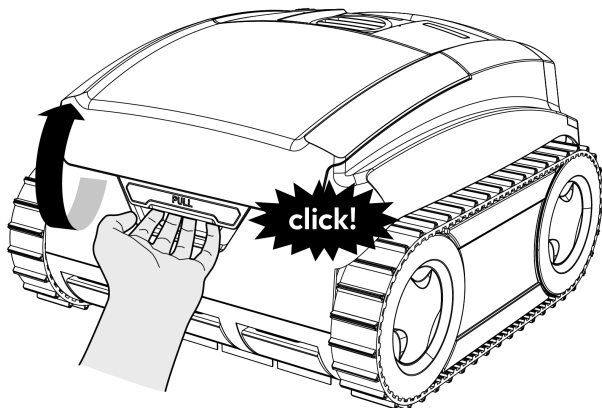


### 4.5.2 Remove the filter basket

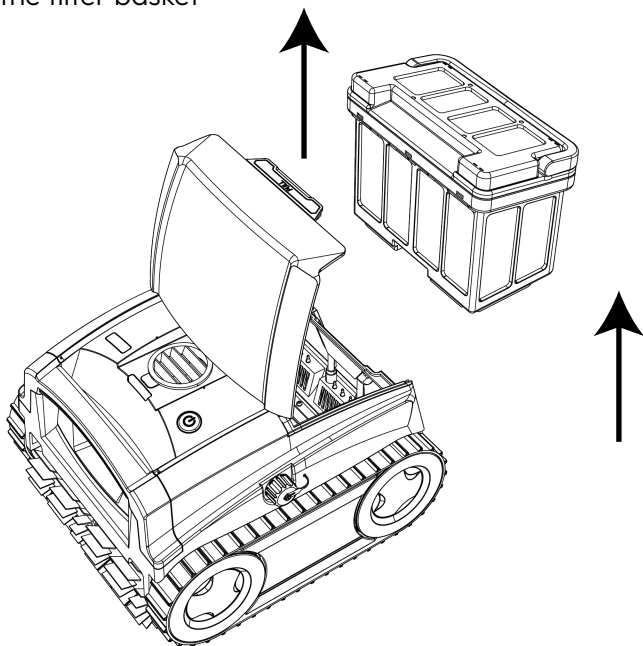


#### 4.5.3 Rinse the filter basket

- Pull the latch of the filter basket to separate it.
- Empty all debris from the filter and bottom tank. Then rinse the filter basket and the bottom tank with a hose or water gun.

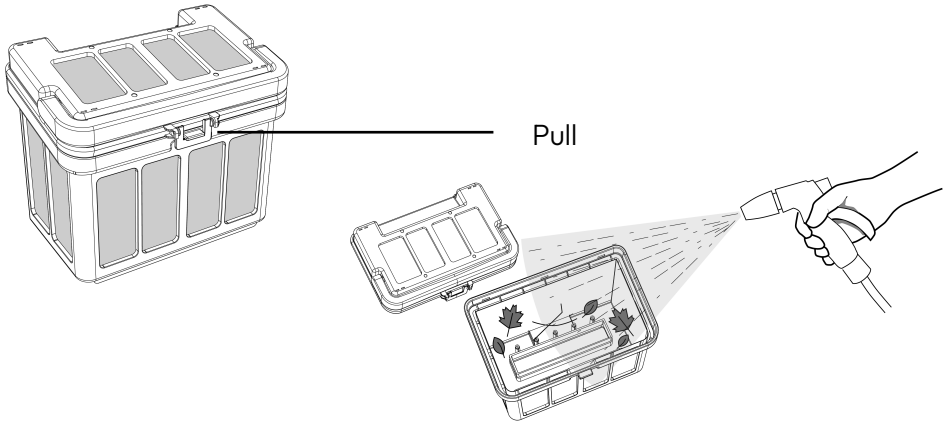

#### 4.5.4 Reinstall the filter basket

After cleaning, install the filter basket in the correct orientation.

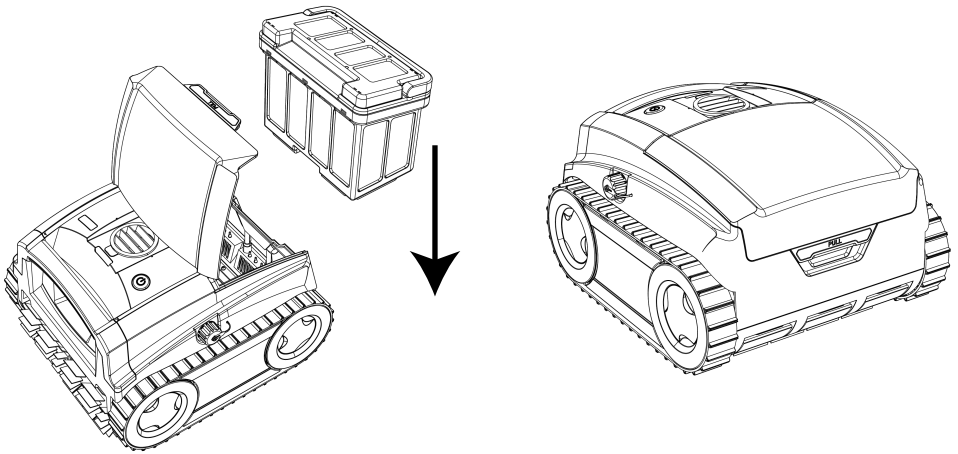

**NOTE:** Clean the filter basket before debris dries.

## Section 5. Storage

- Store the cleaner in a cool, dry, and well-ventilated indoor area, away from direct sunlight, rain, frost, with a temperature between 41°F (5°C) and 95°F (35°C), out of reach of children, pets, other foreign objects, etc.
- Never store the cleaner near flammable materials (e.g., paper, cloth, chemicals) or heat sources (e.g., heaters, ovens).
- Never expose the cleaner to fire or excessive temperature.

### **Long-Term & Winter Storage**

- Drain all water to avoid freezing water damage (freeze damage is not covered under warranty).
- Rinse the filter basket with clean water, air-dry it completely, then reinstall it inside the cleaner.
- Charge the cleaner to 40%-60% capacity once every 3 months (do not fully charge or discharge the battery for long-term storage).

# Section 6. Troubleshooting

Symptom	Possible Reason	Solution
The cleaner fails to start	<ul style="list-style-type: none"> <li>• Low battery power</li> </ul>	<ul style="list-style-type: none"> <li>• Fully charge the battery</li> </ul>
	<ul style="list-style-type: none"> <li>• The red error indicator is steadily on</li> </ul>	<ul style="list-style-type: none"> <li>• Out of water alarm: restart the cleaner and put it into water within 30 seconds</li> </ul>
	<ul style="list-style-type: none"> <li>• The red error indicator is flashing</li> </ul>	<ul style="list-style-type: none"> <li>• Check the belts, wheels and impeller, and carefully remove foreign objects</li> </ul>
		<ul style="list-style-type: none"> <li>• If the above methods are ineffective, please contact after-sales service</li> </ul>
The cleaner runs in circles, moves only in one direction, or cannot turn during operation	<ul style="list-style-type: none"> <li>• The filter basket is blocked</li> </ul>	<ul style="list-style-type: none"> <li>• Clean the filter basket or contact after-sales service for a replacement</li> </ul>
	<ul style="list-style-type: none"> <li>• The belts, wheels or impeller are stuck; or the bottom tank contains debris</li> </ul>	<ul style="list-style-type: none"> <li>• Check and carefully remove foreign objects</li> </ul>
	<ul style="list-style-type: none"> <li>• The driving motor is damaged</li> </ul>	<ul style="list-style-type: none"> <li>• Contact after-sales service for a repair or replacement</li> </ul>
The impeller has abnormal noise or excessive vibration	<ul style="list-style-type: none"> <li>• The impeller is loose or improperly installed</li> </ul>	<ul style="list-style-type: none"> <li>• Check if the impeller is securely installed.</li> </ul>
	<ul style="list-style-type: none"> <li>• Small stones or sand have entered the impeller</li> </ul>	<ul style="list-style-type: none"> <li>• Check and carefully remove foreign objects</li> </ul>

Symptom	Possible Reason	Solution
The cleaner can move but has poor cleaning performance	• The filter basket is blocked	• Clean the filter basket or contact after-sales service for a replacement
	• The belts, wheels or impeller are stuck, or the tank contains debris	• Check and carefully remove foreign objects
	• The filter basket is not installed correctly	• Reinstall the filter basket in accordance with this manual
The cleaner can move but cannot climb the walls	• The filter basket is full	• Clean the filter basket
	• The impeller is stuck	• Check and carefully remove foreign objects
	• The pool wall is too slippery	• Clean the algae and sticky substances on the pool walls
The cleaner moves slowly	• The filter basket is blocked	• Clean the filter basket or contact after-sales service for a replacement
	• The pool water is too cold	• Use the cleaner at an appropriate water temperature (41 °F - 95°F / 5 °C - 35 °C)
The cleaner fails to auto-park	• The sensor is covered with dirt	• Clean the sensor

Symptom	Possible Reason	Solution
The cleaner operates abnormally	• The filter basket is blocked	• Clean the filter basket
	• Air is trapped inside the cleaner	• Power off the cleaner; submerge the cleaner in the pool and hold it in the vertical position to release air trapped inside until no bubbles come out; then restart the cleaner and release
	• The sensor is covered with dirt	• Clean the sensor
	• Belt detachment, impeller damage, or parts falling off	• Contact after-sales service for a repair or replacement
The cleaner fails to recharge	• Battery protection due to the high or low temperatures	• Place the cleaner indoors or in a splash-resistant enclosure with a temperature between 41°F (5°C) and 95°F (35°C) before charging
	• Poor contact	• Replug the charger, or contact after-sales service for a repair or replacement
	• Damaged battery or charger	• Contact after-sales service for a repair or replacement

Symptom	Possible Reason	Solution
The cleaner fails to connect with the “UBoter” app	<ul style="list-style-type: none"> <li>Your mobile phone's Bluetooth function is not enabled</li> </ul>	<ul style="list-style-type: none"> <li>Turn on or restart the Bluetooth function</li> </ul>
	<ul style="list-style-type: none"> <li>Your mobile phone is too far from the cleaner</li> </ul>	<ul style="list-style-type: none"> <li>Bring your smartphone close to the cleaner</li> </ul>
	<ul style="list-style-type: none"> <li>The required permissions were not granted when installing the App</li> </ul>	<ul style="list-style-type: none"> <li>Try uninstalling and reinstalling the “UBoter” app, and grant all permissions.</li> </ul>
	<ul style="list-style-type: none"> <li>The cleaner is in the water</li> </ul>	<ul style="list-style-type: none"> <li>The cleaner cannot connect to the App when in water. Remove it from the water and operate it after powering it on</li> </ul>
	<ul style="list-style-type: none"> <li>Software anomaly or crash</li> </ul>	<ul style="list-style-type: none"> <li>Uninstall and reinstall the App</li> <li>The App is not compatible with your mobile phone</li> </ul>

**NOTE:** If the above methods are ineffective, please contact after-sales service via [service@yofinerobot.com](mailto:service@yofinerobot.com).

## Section 7. Limited Warranty

This product is manufactured by YOFINE Co., Ltd. We are committed to manufacturing products of the highest quality. All YOFINE products undergo strict inspection for material and workmanship defects prior to leaving the factory. YOFINE is pleased to provide a 24-month warranty (starting from the date of original purchase) covering electrical components (batteries, motors, PCBs, chargers); consumables (filters, scrapers, wheels, outlets) are excluded. The terms of this Limited Warranty apply solely to the original purchaser. Please retain your original sales receipt, as this proof of purchase is required and must be submitted along with any warranty claims to YOFINE or its designated agents.

This Limited Warranty does not apply without proof of purchase; nor does it apply if the purchaser modifies or repairs the product themselves or by unauthorized personnel, uses non-YOFINE parts or accessories with the product, uses the product in contravention of the manufacturer's instructions, uses improper voltage, abuses the product in any way, or damages the product due to accident or negligence. This Limited Warranty will not cover consequential damages, including claims for normal wear and tear or any Act of God beyond YOFINE's control. Non-manufacturing defects—such as grass that may grow through the ground cloth and/or pool liner—are examples of issues for which YOFINE cannot be held responsible.

IN NO EVENT SHALL YOFINE, ITS AUTHORIZED AGENTS, RELATED ENTITIES, OR EMPLOYEES BE LIABLE TO THE BUYER OR ANY OTHER PARTY FOR DIRECT OR CONSEQUENTIAL DAMAGES. Some states, countries, or other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This Limited Warranty is not extended to close-outs, factory seconds, or resold products (e.g., products from garage sales, online auctions, or online retailers where purchases are not made directly from YOFINE). Any issues with items purchased from these types of vendors or sellers must be addressed through the respective stores.



# USER MANUAL



For more support, contact us via [service@yofinerobot.com](mailto:service@yofinerobot.com)

Manufactured by: Yofine Co., Ltd.

Made in China